

# WATERMYRK

## **Exploded View**

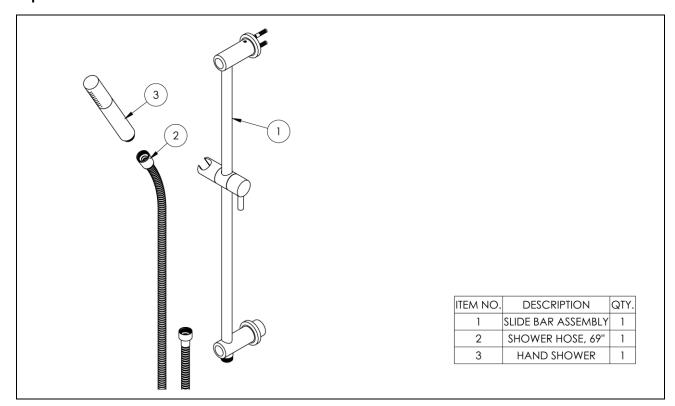

#### **Dimensions**

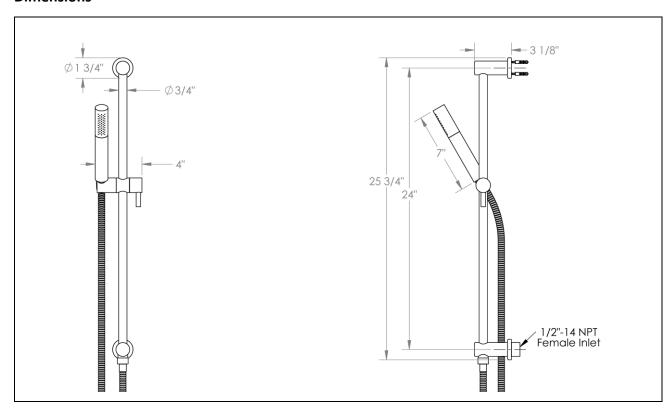



#### **Installation Instructions**

- 1. Install the slide bar assembly (1) per the installation instructions of the PB-2524.
- 2. Flush the assembly to ensure there is no debris.
- 3. Thread the nut end of the **shower hose (2)** onto the outlet thread of the **slide bar assembly (1)**, making sure the rubber gasket is compressed.
- 4. Thread the cone end of the **shower hose (2)** onto the inlet thread of the **hand shower (3)**, again making sure the rubber gasket is compressed.
- 5. Insert the shower hose cone into the slider and adjust to desired position.
- 6. Turn on water and check for leaks.
- 7. Tension on the slider assembly can be adjusted via the two set screws accessible on the hook side. Tighten [clockwise] to increase tension. Adjust both evenly.

### **IMPORTANT INSTALLATION INFORMATION**

- Professional installation is recommended for the slide bar assembly.
- Slide bars should not be used as grab bars.
- Check valves in the bottom post of the slide bar assembly and the inlet of the hand shower should not be removed.
- Refer to maintenance guide for finish care instructions.

For technical support, please call 718-257-2800